



W1000

MOST CLIENTS BELIEVE THEIR CODE STARTS WITH AN 1, BUT ACTUALLY YOU HAVE TO REMOVE THE 1 FROM THE FRONT OF THEIR KEYPAD CODE TO DO THE OTHER PROGRAM FEATURES.

EXAMPLE: KEYPAD CODE 12345
 ACTUAL KEYPAD CODE 2345

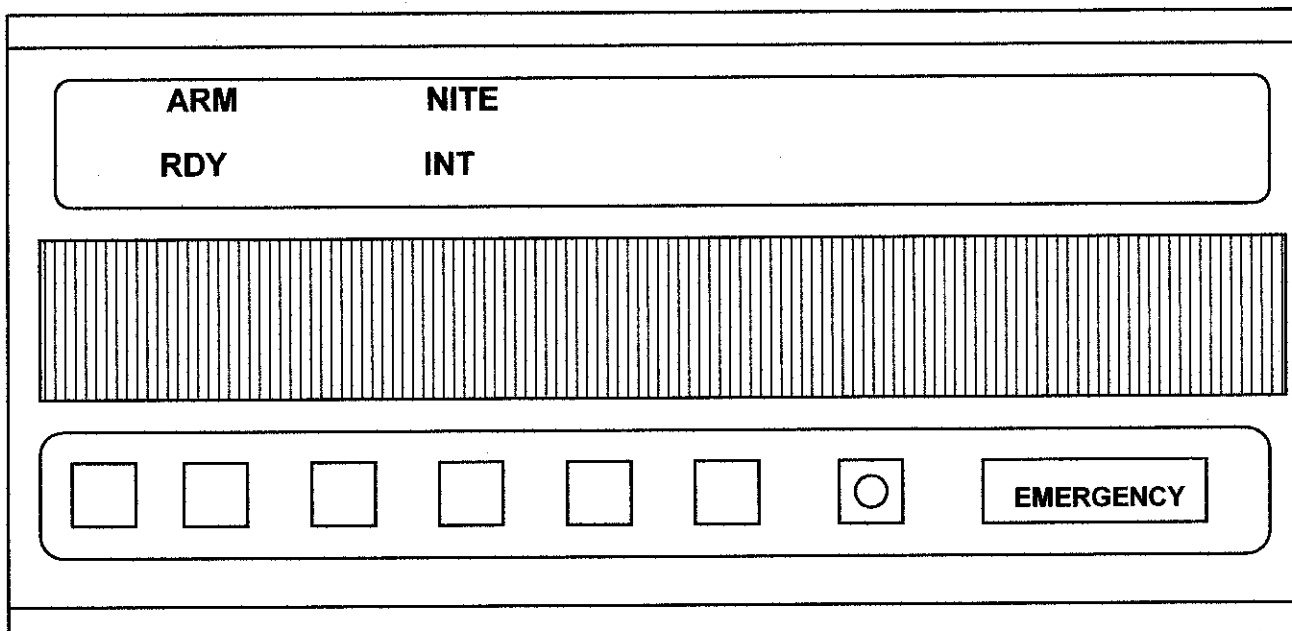

W1000 A KEYPAD

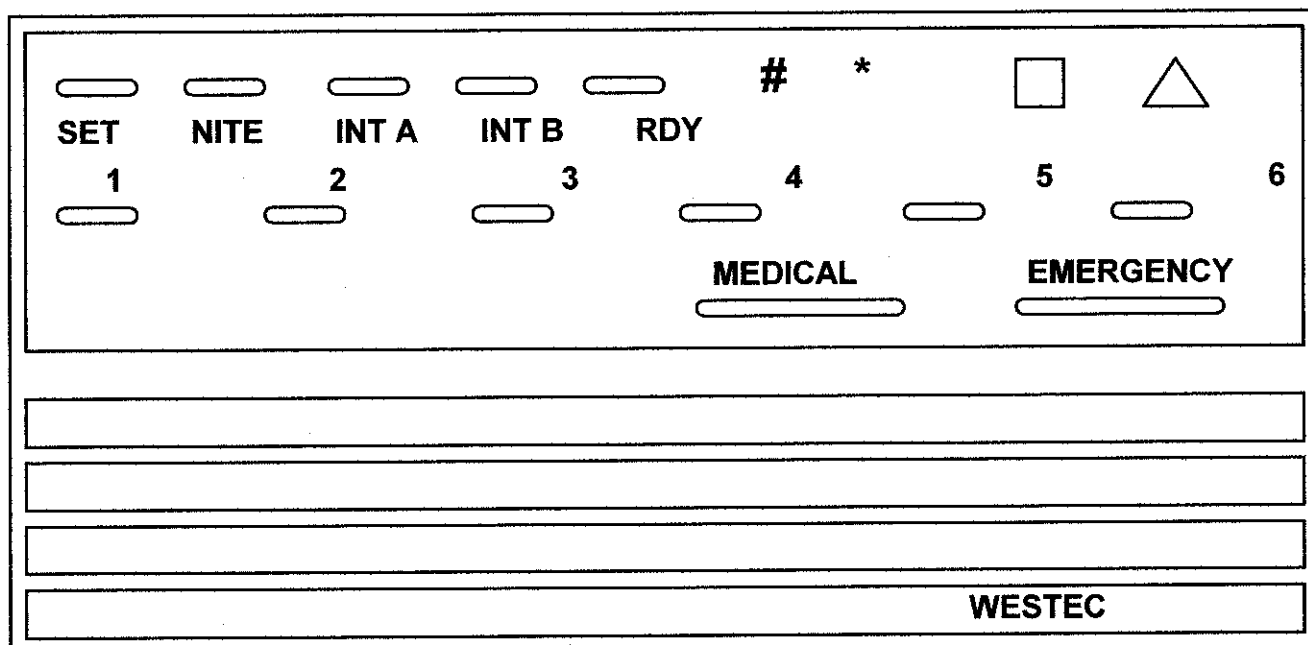

W1000B

ANY KEYPAD

SETS/DISARMS/RESETS ALL ALARMS:
INTERIOR ON/OFF:

SECONDARY CODE SETS/DISARMS/RESETS ALL ALARMS:
DURESS:
FORCEARM AROUND OPEN ZONE:
FIRE RESET:

MAIN KEYPAD

NITE ON/OFF:

SILENCES TROUBLE SOUNDS/FLASHING LIGHT AFTER
AFTER AC LOSS OR LOW BATTERY
TRIGGERS SYSTEM TEST:
ADD SECONDARY CODE:

CHIME ON/OFF:

MAIN PANEL

ON/OFF SWITCH:

RE-ENTERED CODES:

1 + CODE
3 + CODE OR PRESS THE
5 & 0 BUTTONS TOGETHER (EARLY
VERSION)
4 + 1 + CODE
5 + CODE
6 + CODE
1 + CODE + 1 + CODE

2 + 1 + CODE OR PRESS THE 4 & 0
BUTTONS TOGETHER (EARLY
VERSION)

2 + 2 + CODE
2 + 3 + CODE
2 + 4 + CODE + 4 + 1 + SECONDARY
CODE (UP TO 7 DIGITS) WAIT FOR
BEEP
2 + 5 + CODE

BEHIND DOOR ON FRONT OF MAIN
PANEL. TURNING POWER OFF
WILL ERASE THE SYSTEM CODES
AND YOU WILL HAVE TO RE-
ENTERED.

TURN SYSTEM OFF, THEN ON. YOU
HAVE 1 MINUTE TO ENTER THE
NEW CODE. AT THE NEAREST
KEYPAD ENTER 1, THE SYSTEM
WILL ENTER THE SECOND DIGIT + 4
DIGIT DISARM CODE. IF YOU DO
NOT DO THIS WITHIN 1 MINUTE,
THE SYSTEM WILL ENTER THE
DEFAULT OF 5 + 5 + 1 + 2 + 3 + 4. IF
ANY OPEN ZONES, THE SYSTEM
WILL ARM AND THEN GO INTO
ALARM. IF THIS HAPPENS YOU
WILL NEED TO START OVER.