


**WESTEC 1000A
TROUBLE
GUIDE**

W1000A, General Information

- System Key** Small brass or chrome key, looks like a padlock key. Key has number 1247.
- On-Off Switch** Behind door on front of main alarm box. Remember that turning power off will erase the system codes and they will have to be re-entered. See page 3 for procedure to re-enter codes.
- Trouble Silence Switch** Behind door on front of main alarm box. Using the switch will silence all low level tones including Entry Delay tone and Keypad Tone. This will not affect using the system.
- Test** Locate the main alarm box. On the front is a red button marked TEST/FIRE RESET. Press and hold for five (5) seconds then release. Remember that Burglary must be disarmed or the system will not test.
- Interior Sensors** To turn the interior sensors on or off, at the keypad press the 5th button and the 0 button together.
- Nite** To turn the Entry Delay on or off and make the delay sensors instant press the 4th and the 0 buttons together.
- Force Arm** There is no Force Arm feature on this system.
- Zones** There is no zoning available on this system.
- Temporary (Maid's) Code** There are no temporary codes on this system

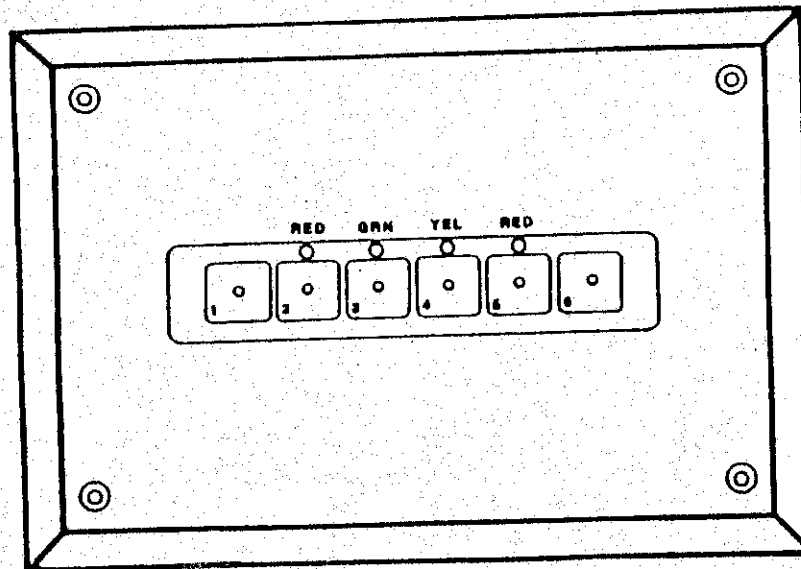

NOTE: NUMBERS AND LETTERING SHOWN ON PLATE ARE FOR REFERENCE ONLY.

W1000A Alarm Reset and Codes

993-9180

Fire Reset

Locate the main equipment, press the TEST/FIRE RESET button on the box and hold for 5 seconds.

Burglary, Emergency, Tamper and Special Reset


To reset these alarms enter the 4 digit disarm code. The alarm noise will stop. In the case of Burglary, if armed entering the code will also disarm Burglary.

Procedure to Re-enter Codes

The arm code must be 2 digits in length and must be the same, such as 1-1,2-2 etc. The disarm code must be 4 digits in length, it may start with any number from 1 to 6 and they may repeat, such as 1-2-2-3.


- 1 At the main box, turn the system off then back on. *You now have 1 min. To enter the new codes.*
- 2 At the nearest keypad, enter only one digit of the arm code, the system will enter the second digit for you.
- 3 Now enter the 4 digit disarm code. If all of the protected openings are closed the green ready light will stop flashing and display solid green.
- 4 Test the new codes by arming and disarming the system.

Note: If the new codes are not entered within 1 min. the system will attempt to arm itself and will enter default codes of 5-5 to arm and 1-2-3-4 to disarm. If any of the protected openings are not closed the system will arm and immediately go into alarm. If this happens, go to the main box, turn the system off then back on and re-enter the new codes again.

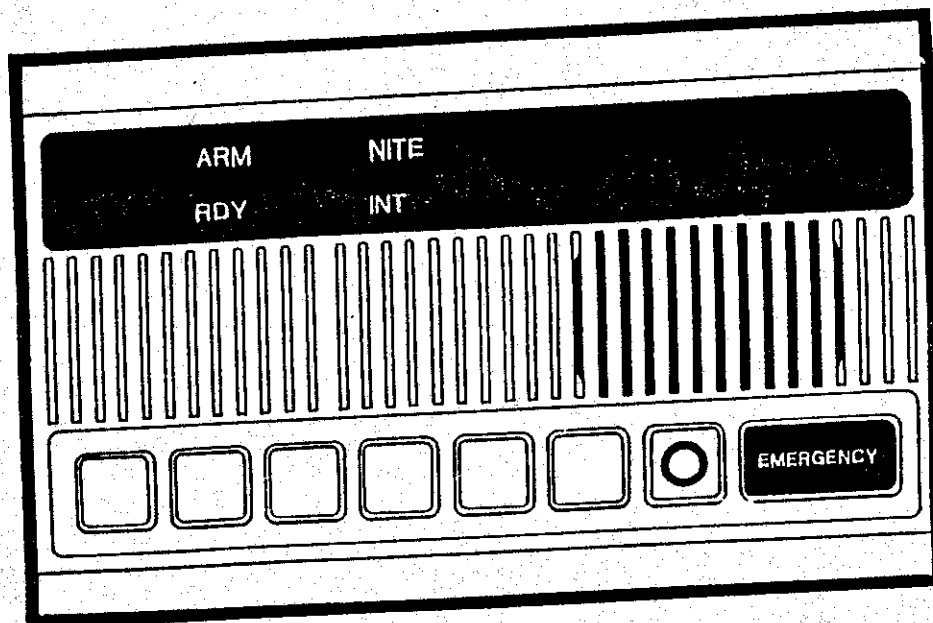

W1000B, General Information

- System Key** Small brass or chrome key, looks like a padlock key. Key has number 000 004 or 00 004.
- On-Off Switch** Behind door on front of main alarm box. Remember that turning power off will erase the temporary code and it will have to be re-enter ed.
- Trouble Silence** Use the code that starts with 2-2. This will not affect using the system.
- Test** Use the code that starts with 2-3. Remember that Burglary must be disarmed or the system will not test.
- Interior Sensors** To turn the interior sensors on or off, use the code that starts with 3.
- Nite** To turn the entry delay on or off and make the delay sensors instant use the code that starts with 2-1.
- Force Arm** To arm Burglary around an open sensor use the code that starts with 6.
- Zones** Burglary was divided into six (6) zones. There was no zoning for any other alarm (Fire, Medical, etc.) on this system.
- Temporary Code** Temp. Code MUST start with 4-1. To change the Temp. Code enter the code that starts with 2-4 and the keypad will beep, then enter the new Temp. code and wait for the keypad to beep again.

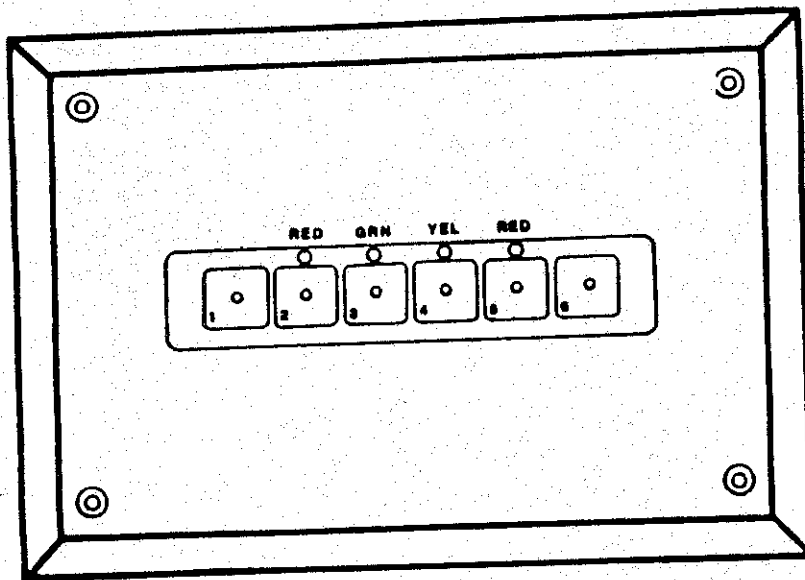


NOTE: NUMBERS AND LETTERING SHOWN ON PLATE ARE FOR REFERENCE ONLY.

W1000A, General Information

- System Key** Small brass or chrome key, looks like a padlock key. Key has number 1347.
- On-Off Switch** Behind door on front of main alarm box. Remember that turning power off will erase the system codes and they will have to be re-entered. See page 3 for procedure to re-enter codes.
- Trouble Silence Switch** Behind door on front of main alarm box. Using the switch will silence all low level tones including Entry Delay tone and Keypad Tone. This will not affect using the system.
- Test** Locate the main alarm box. On the front is a red button marked TEST/FIRE RESET. Press and hold for five (5) seconds then release. Remember that Burglary must be disarmed or the system will not test.
- Interior Sensors** To turn the interior sensors on or off, at the keypad press the 5th button and the 0 button together.
- Nite** To turn the Entry Delay on or off and make the delay sensors instant press the 4th and the 0 buttons together.
- Force Arm** There is no Force Arm feature on this system.
- Zones** There is no zoning available on this system.
- Temporary (Maid's) Code** There are no temporary codes on this system

52413453

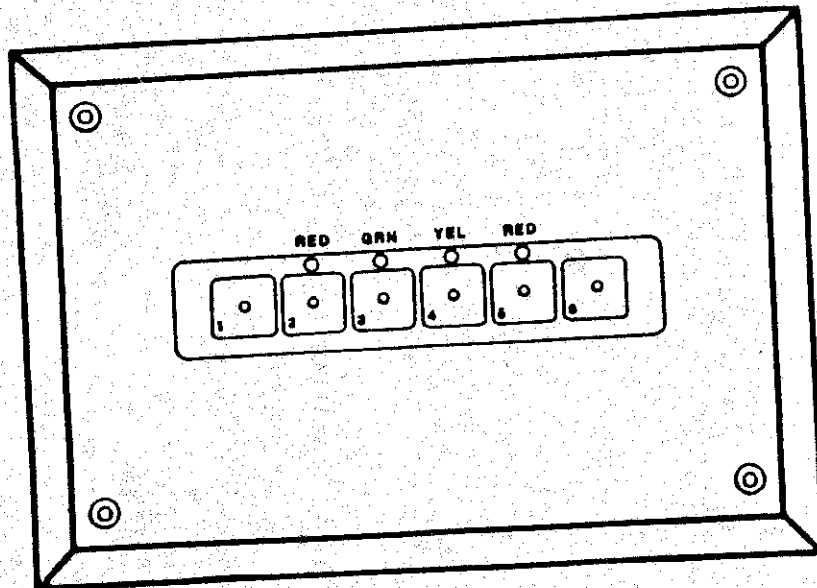

NOTE: NUMBERS AND LETTERING SHOWN ON PLATE ARE FOR REFERENCE ONLY.

Westec 1000A

- 1 + Combo ^(Code) arms, disarms, resets
- 21 + Combo turn nite function off + on (no delay) 3
- 22 + Combo silences troubles + clears trouble conditions
- 23 + Combo activates system test
- 24 + Combo allows customer to change Temp/Maid code by entering 41 + new Temp code (up to 7 digits) Wait for beep to exit this mode.
- 25 + Combo turn door alert (chime) on + off
- 3 + Combo turns interior on or off
- 41 + Temp - arm, disarms, resets all alarms
- 5 + Combo Duress - use instead of 1 to disarm
- 6 + Combo - force arms. Use instead of 1 to arm.

Note 22 + combo this clears the flashing light after AC loss or LOBAT condition.

Westec 1000 A

(2)

To re-enter Codes

1) At main CPU, turn system off, then back on. You have 1 minute to enter new codes.

2) At nearest keypad, enter only ONE digit of the arm code - the system will enter 2nd digit.

3) Now enter the 4 digit disarm code.

(If everything is closed up, green light will stop flashing and be solid green.

4) Test new codes by arming + disarming.

~~ie~~ To arm you would press 55

To disarm you would press 6321

Westec 1000 B

This is closer to 3000, 4000, 5000 models.

set	ntc	intA	intB	Rdy	#	*	□	△
<u>1</u>	<u>2</u>	<u>3</u>	<u>4</u>	<u>5</u>	<u>6</u>			
				<u>medical</u>	<u>Emerg</u>			

To reset fire enter the arm/disarm code twice.