


**WESTEC 1000B
TROUBLE
GUIDE**

W1000B, General Information

- System Key** Small brass or chrome key, looks like a padlock key. Key has number **ESS 094 or ES 094.**
- On-Off Switch** Behind door on front of main alarm box. Remember that turning power off will erase the temporary code and it will have to be re-enter ed.
- Trouble Silence** Use the code that starts with 2-2. This will not affect using the system.
- Test** Use the code that starts with 2-3. Remember that Burglary must be disarmed or the system will not test.
- Interior Sensors** To turn the interior sensors on or off, use the code that starts with 3.
- Nite** To turn the entry delay on or off and make the delay sensors instant use the code that starts with 2-1.
- Force Arm** To arm Burglary around an open sensor use the code that starts with 6.
- Zones** Burglary was divided into six (6) zones. There was no zoning for any other alarm (Fire, Medical, etc.) on this system.
- Temporary Code** Temp. Code **MUST** start with 4-1. To change the Temp. Code enter the code that starts with 2-4 and the keypad will beep, then enter the new Temp. code and wait for the keypad to beep again.

1441
4131
2441

367
202

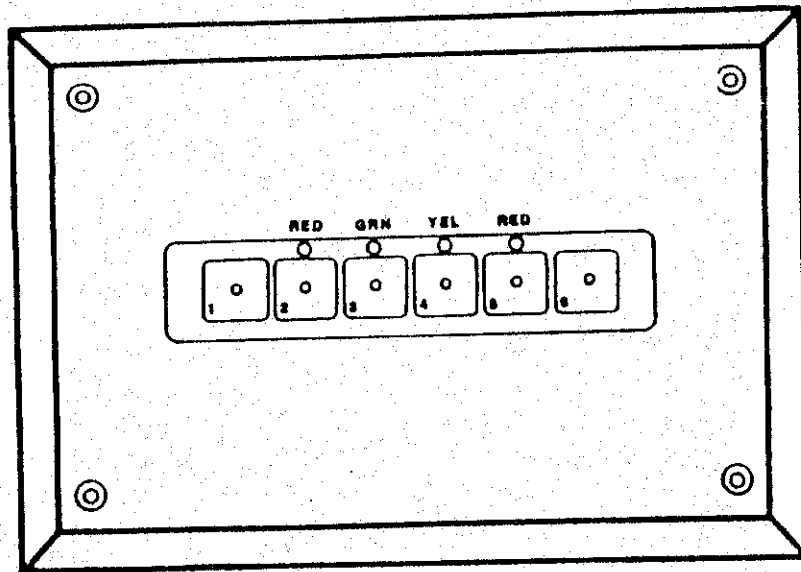

41234
234

NOTE: NUMBERS AND LETTERING SHOWN ON PLATE ARE FOR REFERENCE ONLY.

W1000B Alarm Reset and Codes

Fire Reset:

At the keypad, enter the ARM/DISARM code twice. The first entry will drop the alarm noise to low volume. The second entry will reset the alarm.

To Reset all other alarms except FIRE:

At the keypad, enter the ARM/DISARM code. The system will quiet. In the case of a BURGLARY alarm entering the ARM/DISARM code will reset the alarm and disarm BURGLARY.

CODES


- Code 1 - arms/disarms/resets all alarms
- Code 21- turns nite function on or off
- Code 22- silences trouble sounds
- Code 23- activates system test
- Code 24- allows customer to change 4-1 code
- Code 25- turns door alert on or off
- Code 3 - turns interior on or off
- Code 41- arms/disarms/resets all alarms, customer programmable
- Code 5 - Duress Note: Functions of the 1 code and the 5 code may be reversed.
- Code 6 - causes system to force arm around open zones

Brown

1055

1111

[Handwritten signature]

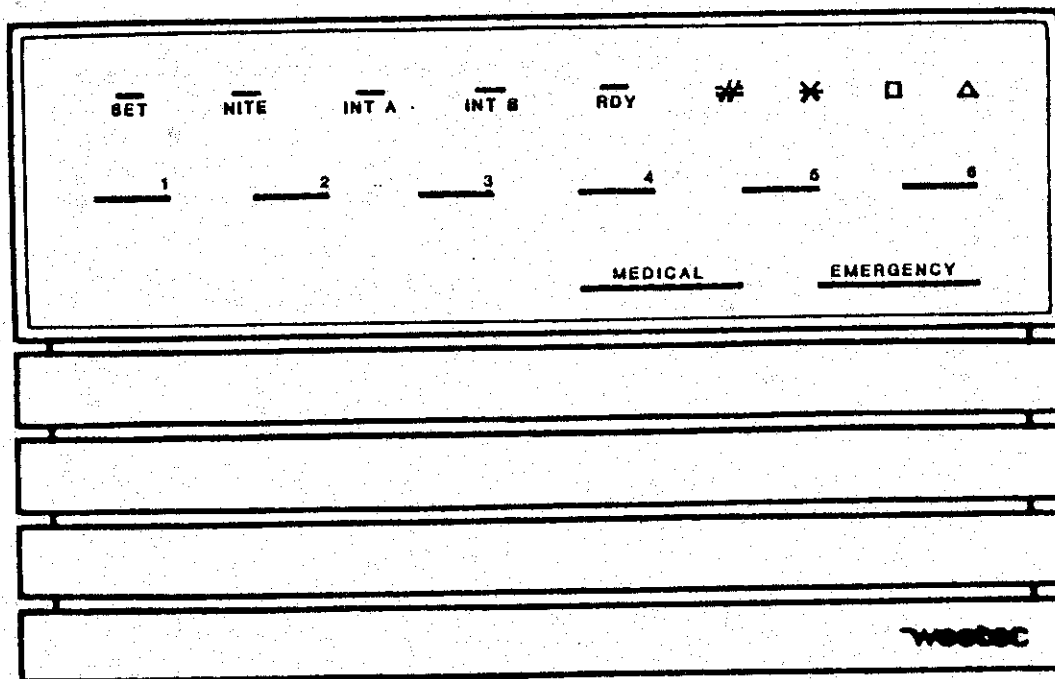

W1000B Alarm Reset and Codes

Fire Reset:


At the keypad, enter the ARM/DISARM code twice. The first entry will drop the alarm noise to low volume. The second entry will reset the alarm.

To Reset all other alarms except FIRE:

At the keypad, enter the ARM/DISARM code. The system will quiet. In the case of a BURGLARY alarm entering the ARM/DISARM code will reset the alarm and disarm BURGLARY.

CODES

- Code 1 - arms/disarms/resets all alarms
- Code 21- turns nite function on or off
- Code 22- silences trouble sounds
- Code 23- activates system test
- Code 24- allows customer to change 4-1 code
- Code 25- turns door alert on or off
- Code 3 - turns interior on or off
- Code 41- arms/disarms/resets all alarms, customer programmable
- Code 5 - Duress Note: Functions of the 1 code and the 5 code may be reversed.
- Code 6 - causes system to force arm around open zones

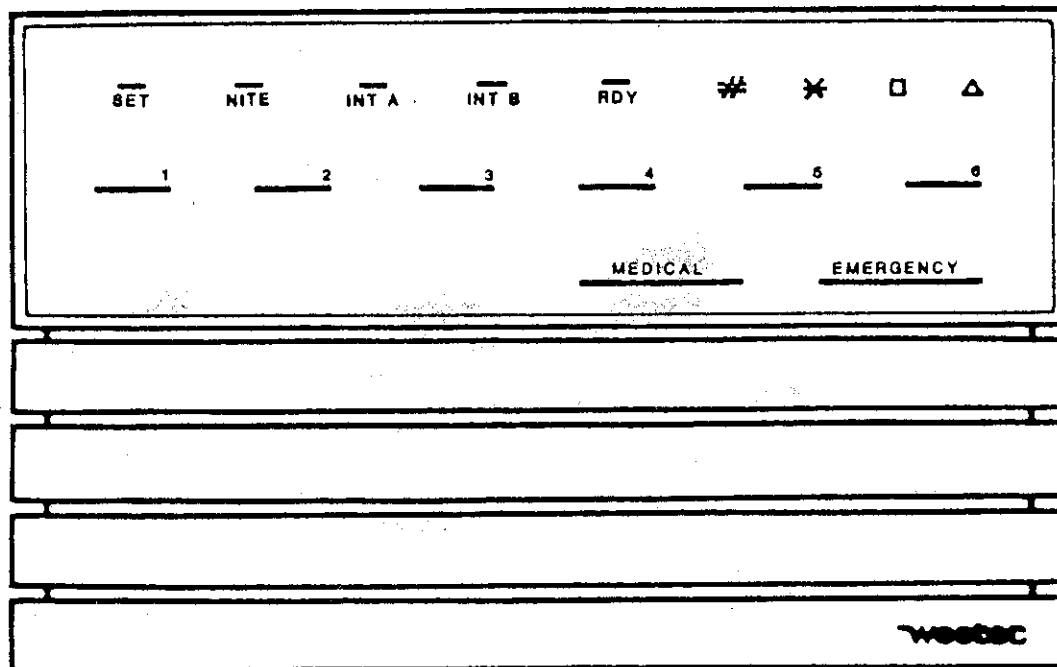

Name _____

Address _____

WESTEC-1000

ABBREVIATED OPERATING INSTRUCTIONS

1. KEYPAD INPUTS:

The keypad inputs control the arm/disarming/resetting of alarms and all the controlled options.

2. The keypads control the following functions:

- CODE*
- 1 plus Combo - Sets, Disarms, Resets all alarms
 - 21 plus Combo - Turns night feature on or off
 - 22 plus Combo - Silences trouble sounds
 - 23 plus Combo - Triggers system test
 - 24 plus Combo - Allows customer to change Temp. code by entering 41 and then new Temp. (up to seven digits). Wait for beep to exit mode.
 - 25 plus Combo - Turns Door alert on or off
 - 3 plus Combo - Turns interior on or off
 - 41 plus Temp. - Sets, Disarms, Resets all alarms
 - 5 plus Combo - Duress. Use instead of 1 plus Combo to disarm
 - 6 plus Combo - Force arms around open zones. Use instead of 1 plus Combo to set.

3. Zone 1 _____
- Zone 2 _____
- Zone 3 _____
- Zone 4 _____
- Zone 5 _____
- Zone 6 _____