


# W4000

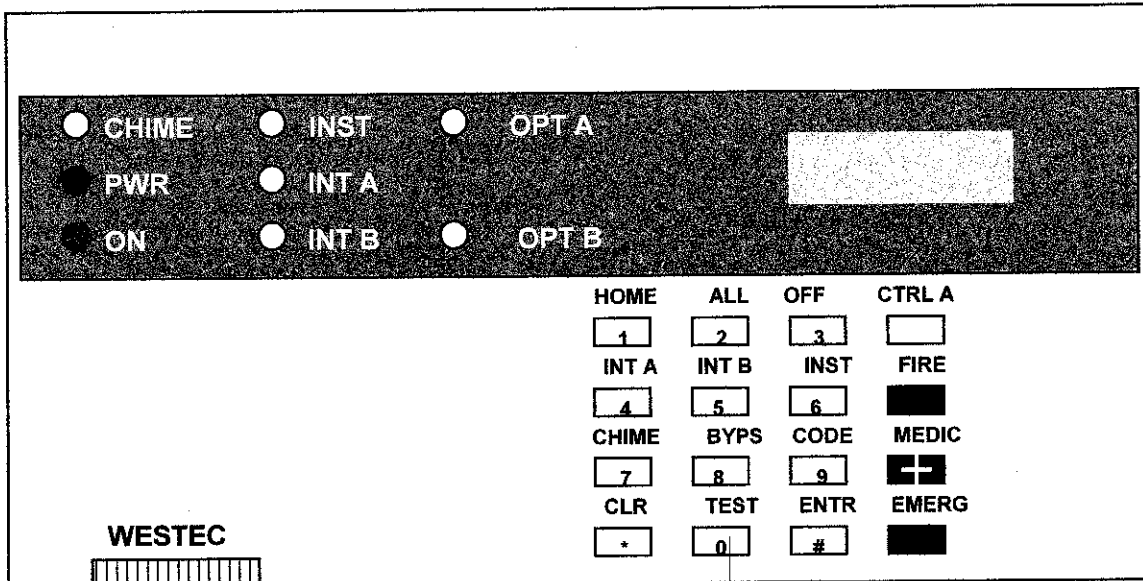

**ARMING PERIMETER ONLY:**

CODE + # (ENTR) + 1 (HOME) + # (ENTR)

**ARMING PERIMETER + INTERIOR:**

CODE + # (ENTR) + 2 (ALL) + # (ENTR)

**DISARMING:**

CODE + # (ENTR) + 3 (OFF) + # (ENTR)

**ENABLING/DISABLING INTERIOR A:**

CODE + # (ENTR) + 4 (INT A) + # (ENTR)

**ENABLING/DISABLING INTERIOR B:**

CODE + # (ENTR) + 5 (INT B) + # (ENTR)

**ENABLING/DISABLING INSTANT:**

CODE + # (ENTR) + 6 (INST) + # (ENTR)

**ENABLING/DISABLING CHIME:**

CODE + # (ENTR) + 7 (CHIME) + # (ENTR)

**BYPASSING ZONES:**

CODE + # (ENTR) + 1 (HOME) OR 2 (ALL) + 8 (BYPS) + # (ENTR)

**BYPASSING ZONES AFTER SYSTEM ARMED:**

CODE + # (ENTR) + 8 (BYPS) + ZONE + # (ENTR)

**BYPASSING ZONES WHILE IN CHIME:**

CODE + # (ENTR) + 8 (BYPS) + 0 (TEST) + # (ENTR)

**BRING BYPASSED ZONE BACK INTO CHIME:**

CODE + # (ENTR) + 8 (BYPS) + 0 (TEST) + # (ENTR)

**ADDING/CHANGING TEMPORARY CODE:** CODE + # (ENTR) + 9 (CODE) +  
TEMPORARY CODE (2-10  
DIGITS) + # (ENTR)

**ENABLING/DISABLING TEMPORARY CODE:** CODE + # (ENTR) + 9 (CODE) +  
# (ENTR)

**CLEARING AN INCORRECTLY PRESSED  
NUMBER:**

**TEST:**

\* (CLR) HOLD FOR 2 BEEPS  
CODE + # (ENTR) + 0 (TEST) + #  
(ENTR) BURGLARY MUST BE  
DISARMED. THE TEST WILL  
LAST APPROXIMATELY 10  
MINUTES

**CONFIRMS ALL SYSTEM COMMANDS:**

**KEYPAD FIRE:**

**KEYPAD MEDICAL:**

**KEYPAD POLICE:**

**QUICK ARMING PERIMETER:**

**QUICK ARMING PERIMETER + INTERIOR:**

**QUICK ENABLE INTERIOR A:**

**QUICK ENABLE INTERIOR B:**

**QUICK ENABLE INSTANT:**

**QUICK ENABLE CHIME:**

**ENABLING/DISABLING QUIET MODE:**

# (ENTER)

FIRE + FIRE

MEDIC + MEDIC

EMERG + EMERG

1 (HOME) HOLD FOR 2 BEEPS

2 (ALL) HOLD FOR 2 BEEPS

4 (INT A) HOLD FOR 2 BEEPS

5 (INT B) HOLD FOR 2 BEEPS

6 (INST) HOLD FOR 2 BEEPS

7 (CHIME) HOLD FOR 2 BEEPS

CODE + # (ENTR) + 3 (OFF)

HOLD FOR 2 BEEPS + # (ENTR)

# (ENTR) HOLD FOR 2 BEEPS

DURESS CODE + # (ENTR)

**CHECK SYSTEM STATUS:**

**DURESS:**

**LAST DIGIT OF YOUR CODE INCREASED BY**

**ONE. EXAMPLE:**

**REGULAR CODE:** 1234

**DURESS CODE:** 1235

**PROGRAMMABLE FUNCTION ARMED/DISARMED:**

**CUSTOM CODES ARMED/DISARMED:**

CTRL A

AUTO-EXECUTE CODE + #

(ENTR)

CODE + # (ENTR)

\* (CLR) FOR 2 BEEPS

CODE + # (ENTR) + 3 (OFF) + #


(ENTR)

**MEDICAL/EMERGENCY RESET:**

**SILENCE TROUBLE CONDITION:**

**TROUBLE RESET:**

**MAIN PANEL**


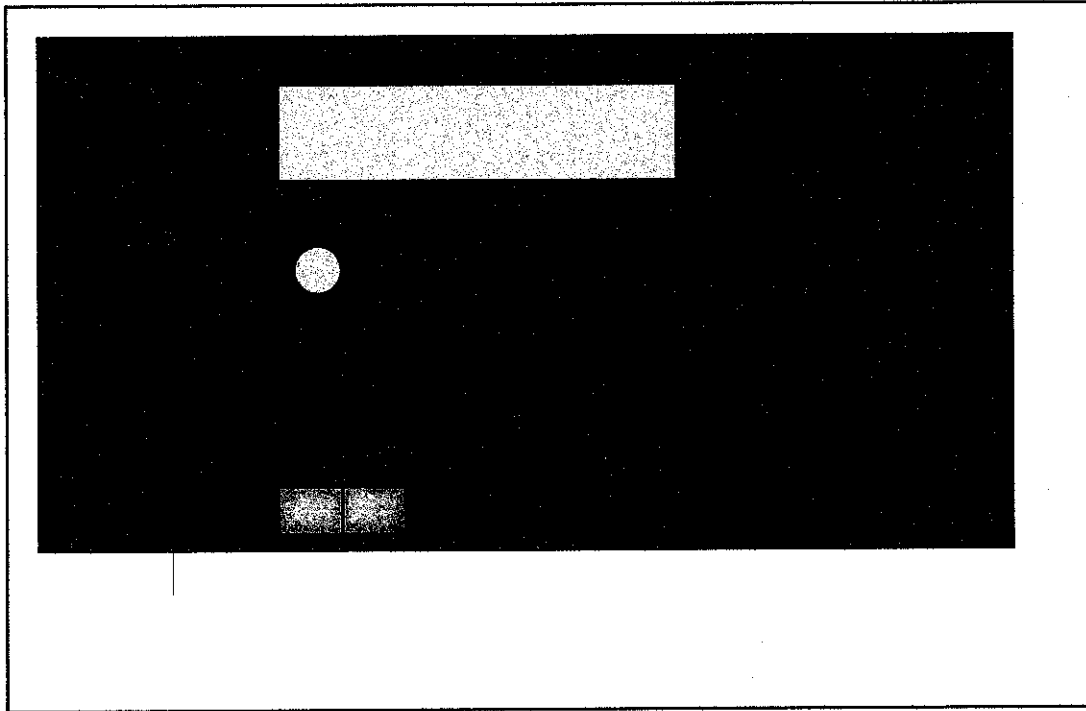


**ON/OFF SWITCH**

**LOCATED ON UPPER  
LEFT SIDE**



**OUTSIDE KEYPAD (OAT)**

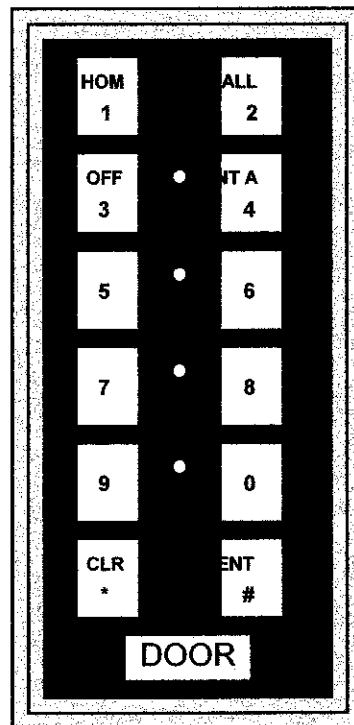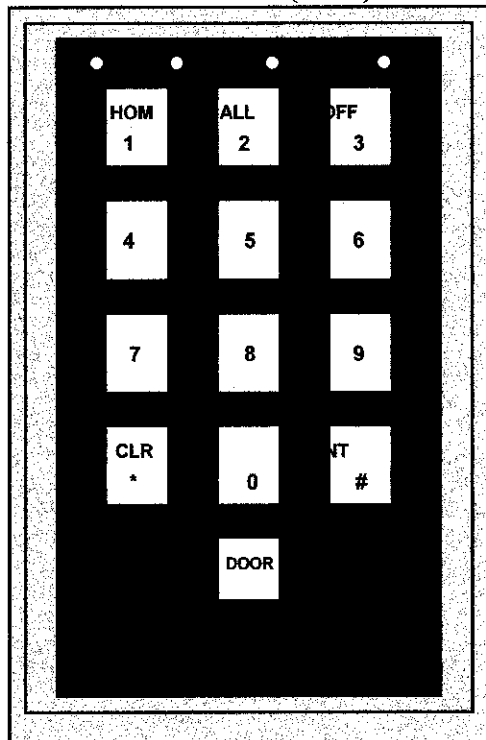

**FIRST INDICATOR LIGHT:**

**SECOND INDICATOR LIGHT:**

**THIRD INDICATOR LIGHT:**

**FOURTH INDICATOR LIGHT:**

**SECOND INDICATOR LIGHT IS FLASHING:**

**SYSTEM IS ARMED**

**SYSTEM IS READY TO  
BE ARMED. ALL  
ZONES SECURED**

**INTERIOR PROTECTION  
ENABLE**

**PROGRAMMABLE  
FUNCTION ASSIGNED IS  
ENABLE**

**ALARM ACTIVATION  
HAS OCCURRED.**