


W5000S

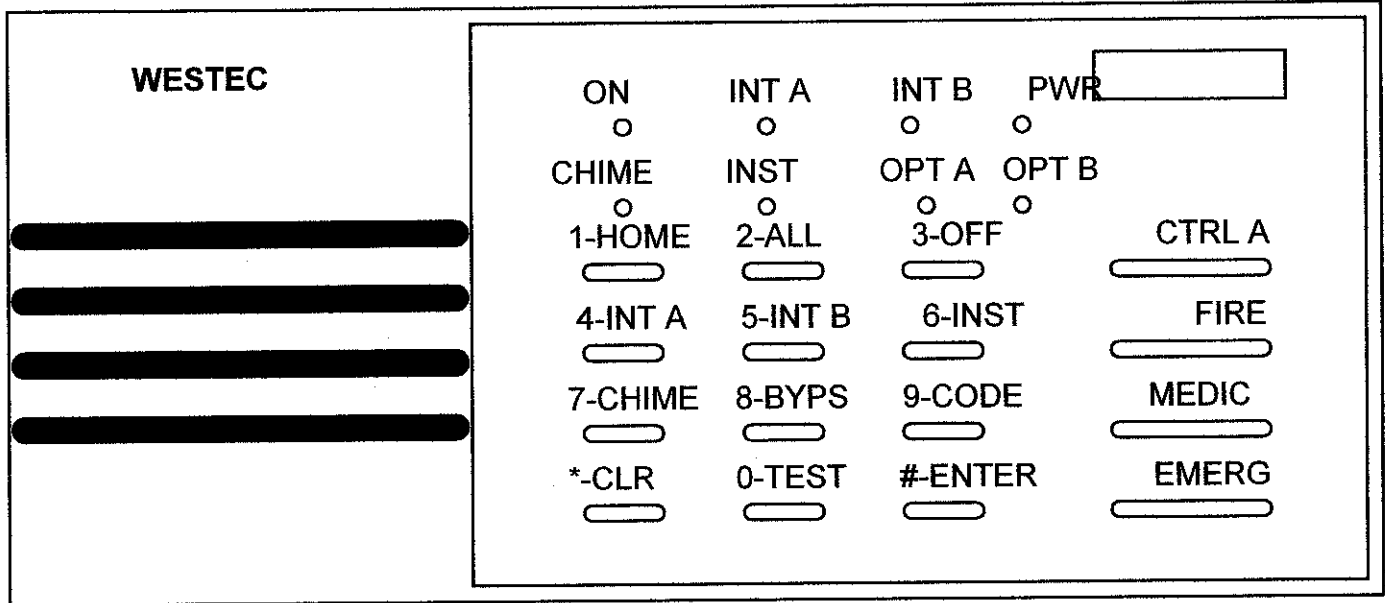

- | | |
|---|--|
| <p>RESET ALARM:</p> <p>ARM PERIMETER ONLY:</p> <p>ARM PERIMETER + INTERIOR:</p> <p>DISARM SYSTEM:</p> <p>PERIMETER ARMED + WANT TO ADD INTERIOR A:</p> <p>PERIMETER ARMED + WANT TO ADD INTERIOR B:</p> <p>TURN ENTRY DELAY OFF & ARM SYSTEM:</p> <p>CHIME ON/OFF:</p> <p>BYPASS ZONE AUTOMATICALLY:</p> <p>BYPASS CERTAIN ZONE:</p> <p>ADD SECONDARY KEYPAD CODE:</p> | <p>CODE + # (ENTER) + 3 (OFF) + # (ENTER)</p> <p>CODE + # (ENTER) + 1 (HOME) + # (ENTER)</p> <p>CODE + # (ENTER) + 2 (ALL) + # (ENTER)</p> <p>CODE + # (ENTER) + 3 (OFF) + # (ENTER)</p> <p>CODE + # (ENTER) + 4 (INT A) + # (ENTER)</p> <p>CODE + # (ENTER) + 5 (INT B) + # (ENTER)</p> <p>CODE + # (ENTER) + 6 (INST) + # (ENTER)</p> <p>CODE + # (ENTER) + 7 (CHIME) + # (ENTER)</p> <p>CODE + # (ENTER) + 1 (HOME) OR 2 (ALL) + 8 (BYPS) + # (ENTER)</p> <p>CODE + # (ENTER) + 8 (BYPS) + ZONE # + # (ENTER)</p> <p>CODE + # (ENTER) + 9 (CODE) + # (ENTER) + 9 (CODE) + SECONDARY CODE (2-9 DIGITS) + # (ENTER)</p> |
|---|--|

TO CLEAR A FUNCTION ENTERED INCORRECTLY:

CODE + # (ENTER) + * (CLR) + # (ENTER)

TEST:

CODE + # (ENTER) + 0 (TEST) + # (ENTER) SYSTEM WON'T TEST IF THERE IS A SPECIAL PROGRAM AS A 24 HOUR ZONE

QUICK ARM PERIMETER ONLY:

1 (HOME) + # (ENTER)

QUICK ARM PERIMETER + INTERIOR:

2 (ALL) + # (ENTER)

QUICK ARM INTERIOR A:

4 (INT A) + # (ENTER)

QUICK ARM INTERIOR B:

5 (INT B) + # (ENTER)

TROUBLE CONDITIONS


SYSTEM WON'T ARM

CHECK TO SEE IF PWR LIGHT IS ON. FLASHING GREEN LIGHT MEANS SYSTEM TROUBLE. NO LIGHT INDICATES AC OFF OR SYSTEM HAS BEEN TURNED OFF. MAKE SURE ALL DOORS AND WINDOWS ARE SHUT.

SILENCE TROUBLE ALARM:

*** (CLR)**

MAIN PANEL

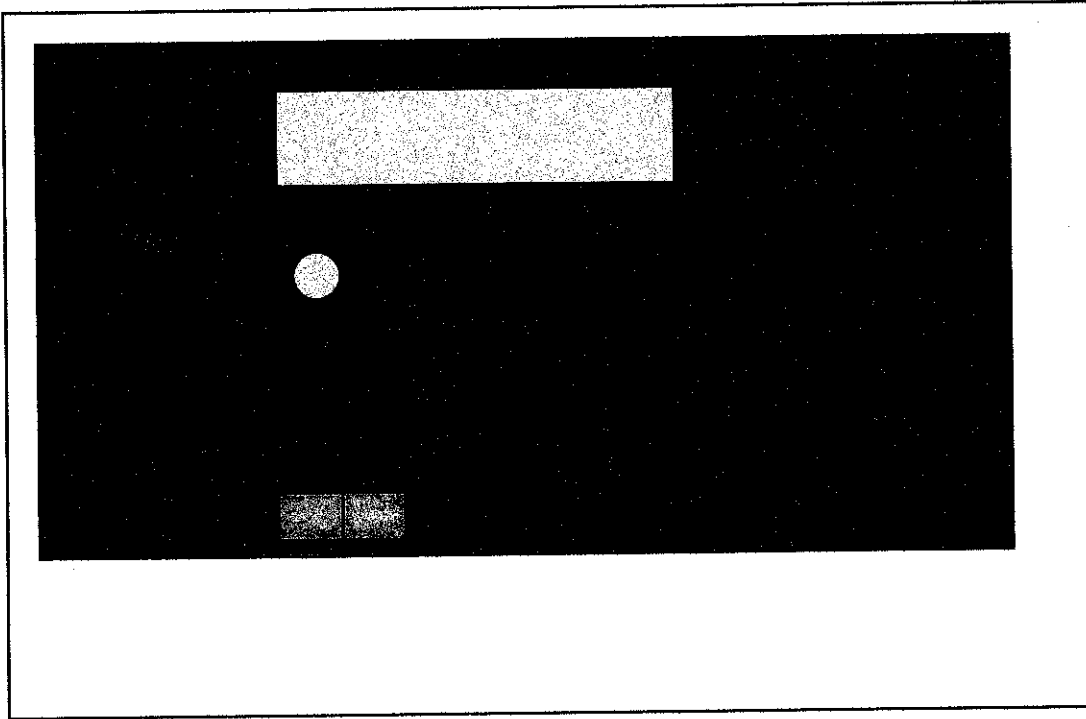

ON/OFF SWITCH

LOCATED ON UPPER LEFT SIDE

